

CONTENTS

BEFORE USING THE DRYER/CONNECTIONS

PRECAUTIONS AND GENERAL RECOMMENDATIONS

DESCRIPTION OF THE DRYER

**DRAINAGE SYSTEM ONLY FOR WATER CONTAINER TOP
VERSION**

DOOR REVERSIBILITY

CHILD SAFETY LOCK

HEAT EXCHANGER

BEFORE USING THE DRYER/CONNECTIONS

1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
- Remove the protective foil from the control panel.

2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The manufacturer cannot accept any liability for personal injury or damage to property resulting from failure to adhere to these instructions.
- The dryer must be earthed as prescribed by law.
- Do not use extension leads or multiple adaptors.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.
- Mains cable replacement is only to be carried out by After-Sales Service.

3. Installation

- Do not install your dryer where it can be subject to extreme conditions, such as: poor ventilation, temperatures around freezing or above 35° C.
- Before running the first cycle ensure the water container and heat exchanger are correctly positioned.
- Only for water container top version: if possible use the hose supplied to drain the water directly into the domestic plumbing system. This will avoid having to empty the water container at the end of each drying cycle since the condensation water can be directly drained away.
- Take care not to trap the mains cable between the dryer and the wall.

Stability:

When installing the dryer always carefully level the dryer adjusting the four feet and check the correct levelling with a spirit level.

Stacking kit

Your dryer can be stacked on top of your front loading washing machine. To do this, use stacking kit AMH 542, available from your dealer.

Minimum housing dimensions:

Width: 600 mm

Height: 850 mm


Depth: 600 mm



PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Packing



The packing box may be fully recycled as confirmed by the  recycling symbol.

2. Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time.
- Always use the maximum allowed spin speed of your washing machine, since draining the water mechanically requires less energy. You will save time and energy when running your drying cycle.
- Do not overdry the laundry.
- Clean the lint filter after **every** drying cycle.
- Place your dryer in a room with a temperature between 15° C and 20° C. In case of higher temperature ventilate the room.
- Always select the correct programme/drying time for the load in order to obtain the desired drying results.
- Select the *gentle* option only with small loads.
- When drying cotton, for example. dry *iron dry* and *cupboard dry* loads together. Start with the *iron dry* programme/drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the *cupboard dry* setting.

3. Disposing of packaging and old Dryer.

The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.

- Before scrapping, cut off the power cable so that the dryer cannot be connected to the mains.

4. Child safety:

Children must not be allowed to play with the dryer.

5. General recommendations:

- Always set the programme/time selector knob to the "0" position after use. This prevents the dryer from being switched on accidentally.
- Before cleaning or carrying out maintenance, switch off the dryer and disconnect it from the mains supply.
- To clean the outside of the dryer, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- Wipe away lint from the door seal and the door using a damp cloth.

- If the lint filter mesh is clogged, clean it with water and a soft brush.
- Since lint can go through the filter it is necessary to clean, from time to time, the complete filter area (including below the filter) with a brush, a damp cloth or with a vacuum cleaner.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

 
EC Declaration of Conformity

This dryer has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:

- 93/68/EC.
- The dryer must only be used in the household for the prescribed uses.

DESCRIPTION OF THE DRYER

1. Work top.
- 2a. Water Container top version
or
- 2b. Water Container bottom version.
3. Contact pin.
4. Door:
To open the door: pull the handle.
To close the door: push gently until closed.
5. Filter.
6. Child Safety Lock.
7. Drum light (if available):
Only comes on when the door is open (the programme/time has to be selected).
Light Off: set the programme/time selector knob to "0" position, or press the option button.
8. Button for heat exchanger flap opening.
9. Heat exchanger.

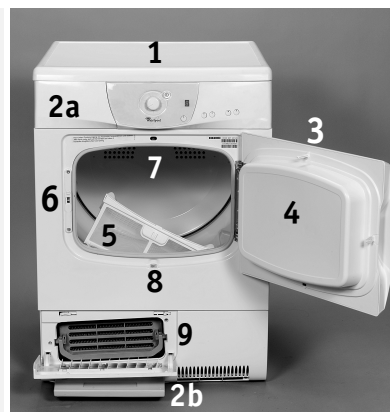



DRAINAGE SYSTEM ONLY FOR WATER CONTAINER TOP VERSION

To avoid having to empty the water container at the end of each cycle, the condensation water can be drained away by means of the enclosed hose.

The connection for direct draining is at the rear of the dryer.

1. Place an absorbent cloth underneath to collect water spillage.
2. Remove the hose located at the lower rear part of the dryer and insert it in the nearby hole.
3. Fix the hose supplied with the dryer (length: 1.5 m) to the outlet connection. The height difference between the two drainage connections should not exceed 1m.

  
Notice: To avoid siphoning, the end of the hose must not be immersed in the drain water. Avoid bending and twisting the hose.

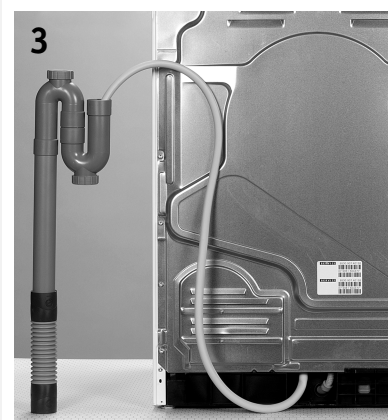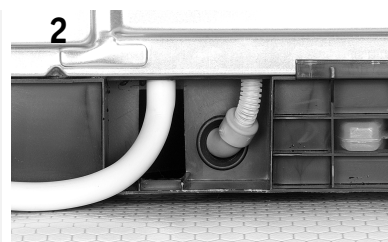

DOOR REVERSIBILITY

Door Reversibility

 1. **Unplug the dryer.**
2. Open the door.
3. Using a spanner, turn the contact pin in the upper part of the door by 90° and remove it.
4. Unscrew the 2 screws of the door hinge and remove the door.
5. Removing the door lock:
Unscrew the 2 screws above and below the door lock system
Lift the door lock from the bottom, sliding it upwards about 1.5cm, and remove it.
6. Reverse the door:
Fasten the door on the desired side with the 2 screws.
Insert the door lock system on the opposite side side of the door and push it down 1.5cm.
Fix the 2 screws above and below the door lock system.
Take care not to reverse the sense of the door lock system. The child safety must be above the locking mechanism.
7. Replace the contact pin in the inside of the door (top).

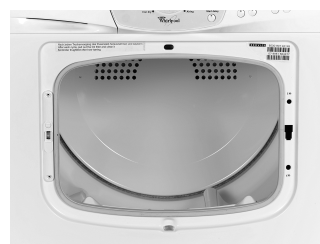

CHILD SAFETY LOCK

How to use the child safety lock

1. Open the door.
2. Using a coin or a screwdriver, turn the plastic screw clockwise 90°.
Slot vertical: the door cannot be locked.
Slot horizontal: the door can be locked.

HEAT EXCHANGER

Before cleaning or carrying out maintenance, switch off the dryer.

Clean the heat exchanger at least every three months, proceeding as follows:

1. Open the door and press the heat exchanger flap button on the bottom of the door entrance.
2. The heat exchanger flap opens.
3. Fold the heat exchanger handle upwards to the horizontal position and remove the heat exchanger.
4. Clean the heat exchanger under running water.
5. Wipe away dust and lint from the seals and the heat exchanger.
6. Remove the lint in the heat exchanger housing. Keep the drainage hole (left side in front in the housing) free from lint.
7. Re-insert the heat exchanger and press the handle downwards, observing the TOP sign.
8. Close the flap.

The heat exchanger aluminium plates may become discoloured over time.

